

GH OPERATIONS (RESIDENTIAL STATION)

Responding to a Call

1. When the call is made from an entrance station or security guard station, a call tone will ring at the residential station for approximately 10 seconds. An image will be displayed on the monitor (where fitted) of the residential station for calls from a video door station.
2. On the residential station, press the talk button for less than one second to respond and talk hands free to the door station or security guard station. The red LED on the talk button will turn on when you speak.
 - If you press the talk button for more than one second, a beep will be emitted and you can now communicate by press-to-talk communication. Use this mode if there is noise at the door station and the talk LED does not turn on when you speak.
 - In press-to-talk communication mode, you press the talk button to talk and release it to listen. You must hold down the talk button longer than 1 second in press to talk mode while talking or the call will be terminated.
3. When you are finished, press down the talk button for less than 1 second to turn off the room station.
 - The communication will end automatically after approximately 40 seconds when hands free communication is used at the residential station or after approximately 3 minutes when handset is used.

Call from the Doorbell Button (Option)

1. A call tone sounds at the apartment station as long as the door bell button is held pressed.
2. A different call tone sounds for a doorbell call (there is no communication available).

Adjusting call volume at room station

1. The left hand slide switch on the bottom of the room station adjusts the room station call volume.
2. This is a 3 position switch. When the switch is moved to the far left off position the LED on the front panel on the room station will flash to indicate the room station call volume is turned off.

Adjusting receive volume at room station

1. The right hand slide switch on the bottom of the room station adjusts the receive volume.

Door Release

1. Press the door release button while communicating with the door station to open the entrance door.
2. The door release will only activate on the entrance station that is communicating with the apartment.

Elevator Control (Option GH1AD and GH1KD stations only)

1. Press the service switch button. (Button to the left of the guard call button on the room station)
2. This will enable the elevator control function as programmed.

Calling the Security Guard Station (Option requires guard station)

Press the light/security guard station call button on the residential station. You will hear a low-volume call tone. When the system is being used for communication, an in-use tone will be heard at the residential station. When the guard station answers you can talk hands free. The call can be terminated by the guard hanging up their handset or by pressing the talk button on the room station.

Emergency Alarm (Option requires emergency or panic switch and guard station)

1. Press the emergency alarm switch in the apartment.
2. A loud alarm will sound from the residential station. The emergency alarm will be emitted at a loud volume, regardless of the volume setting on the room station.
3. The alarm will sound at the security guard station and sound for approximately 45 seconds.
4. When the security guard responds to the alarm the apartment station will start to ring and the alarm tone will stop. Press the talk button to initiate communications with the security guard station. After conversation is finished with the guard station reset the alarm switch or the emergency alarm will begin to sound again.

NOTES:

1. The emergency alarm function can be activated even when the system is in use; alarm calls take priority over normal communications. (Alarms can be activated at the same time by up to 10 residences.)
2. Room stations within the same residence will be unable to receive normal calls or doorbell calls while the emergency alarm is sounding. It is only possible for these stations to respond to a call from the security guard station.

Entrance Monitoring

With an apartment station, you can monitor entrance stations by pressing the door release button in standby mode. You can switch between the entrance stations by pressing the door release button multiple times.

NOTES:

1. Entrance monitoring is possible for only one residential station in the system at a time.
2. If a call is made from any entrance station to any apartment in the system while monitoring, monitoring is terminated. Monitoring is not possible when there is communication in progress from any entrance station or guard station to any apartment in the system.
4. Monitoring lasts for 20 seconds then it will switch off automatically.

These instructions should be read in conjunction with the safety instructions contained in the installation manual.